




3PDT Foot Switch

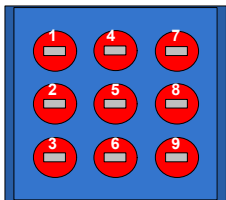


PF5102
n-channel
JFET

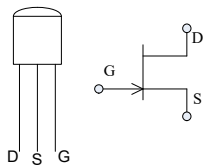

2N5088
NPN BJT

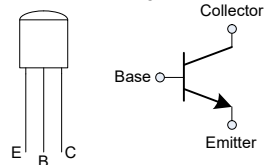

MPSA13
NPN Darlington Transistor

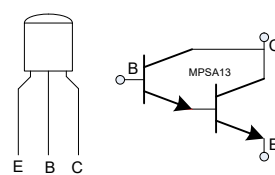

www.modkitsdiy.com

Copyright © 2018 by modkitsdiy.com

**"The Rock Bottom" (K-991)
Schematic**